



折叠后宽10cm高9cm

1封面

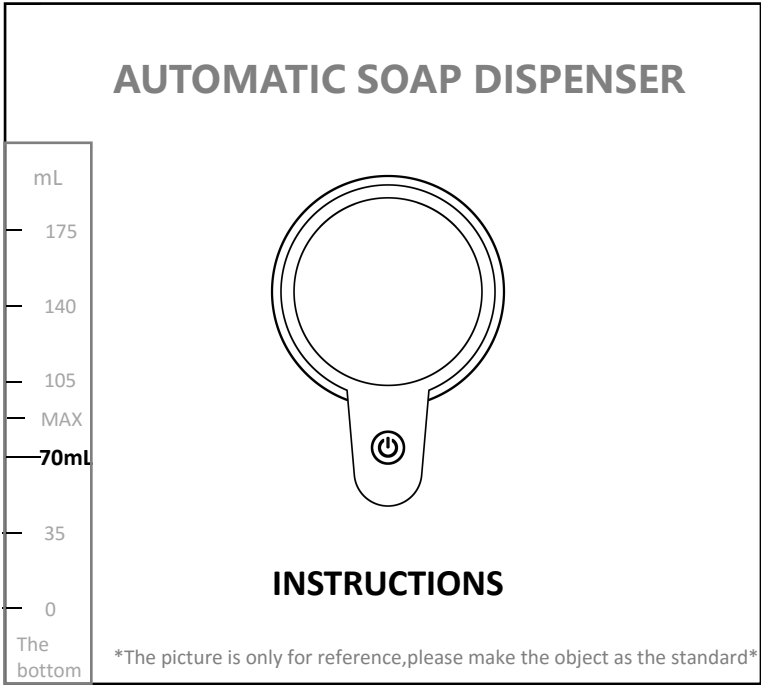


2

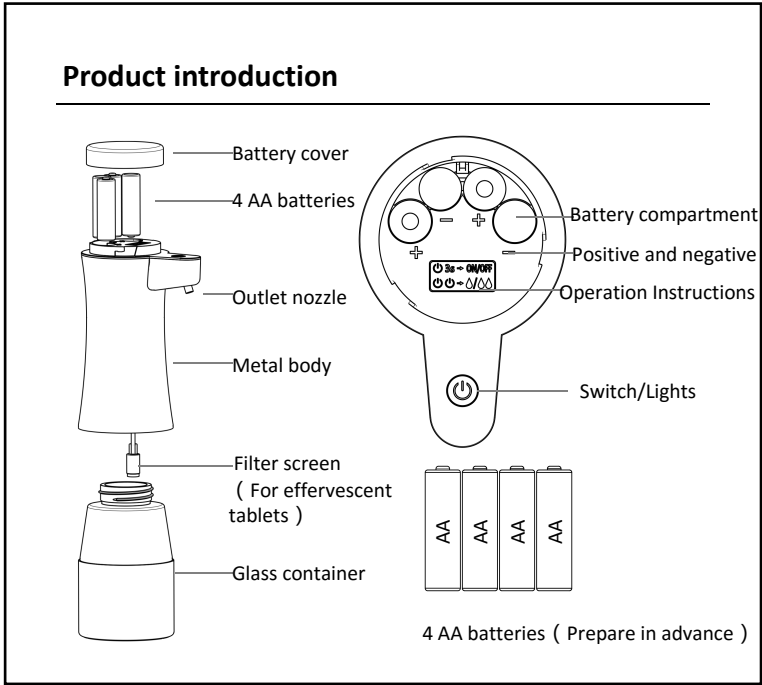

3

### Battery Installation

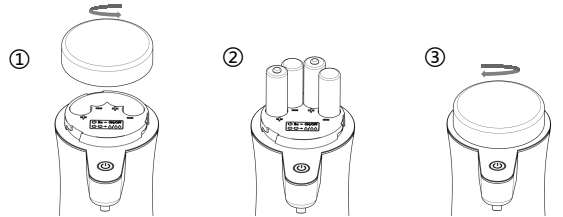

1. Turn counter clockwise to open the battery cove.
2. Properly install 4 AA batteries.
3. Tighten the battery cover clockwise according to the sign.

注：  ARCHES

\*Please prepare 4 AA batteries in advance\*



OPEN




CLOSE

4

### Consumable Filling

This machine is suitable for frothy liquid consumables.




1. Twist off the glass bottle.
2. Add 300mL soap to the glass container.
3. Make sure there are no floc or impurities.
4. Tighten the fuselage and glass bottles.
5. Press and hold the power button for 3S on/off.


Suitable for:

1. Hand sanitizer: Frothy liquid.
2. Facial cleanser: Frothy liquid;.
3. Bath milk: frothy liquid.
4. Shampoo: 3 times pure water diluted, dissolved to no FLOC.
5. Detergent: 3 times pure water diluted, dissolve to no FLOC.
- 6 Sanitizer: Frothy liquid.

"4.5.The most appropriate volume of gel was 70mL before dilution"  
To use effervescent tablets, install a filter.

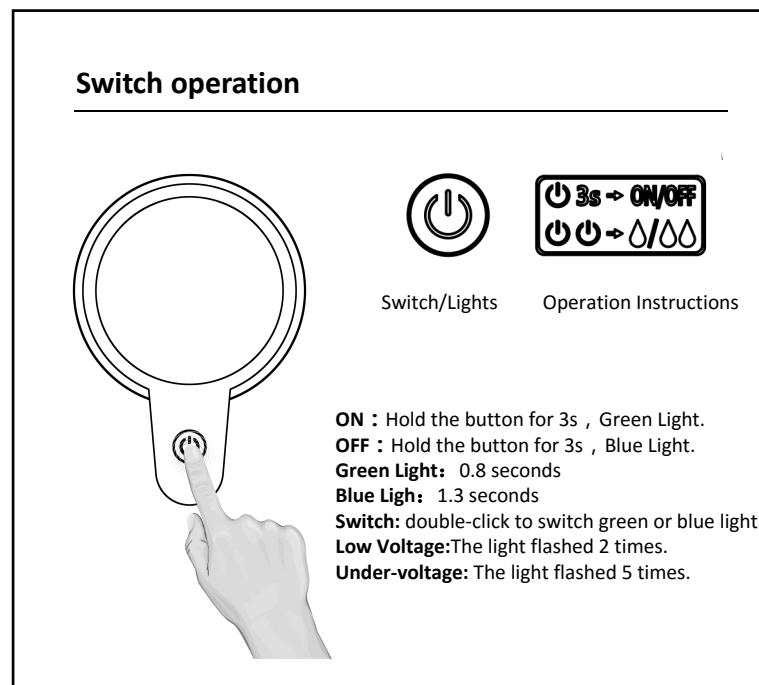


### Product characteristics

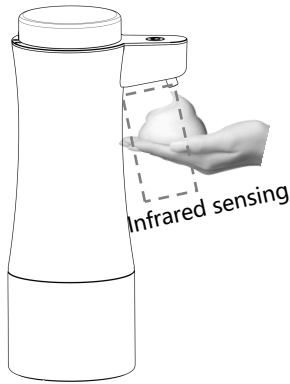

- GLASS CONTAINER
- METAL BODY
- WATERPROOF
- REPLACEABLE LIQUID
- SEPARATION OF WATER AND ELECTRICITY
- AUTOMATIC TOUCHLESS
- ONE BUTTON CONTROL
- PROPRIETARY PATENT

\*Infrared sensing is not good for black or transparent objects. Please do not touch the sensing window when using\*

### Basic parameters

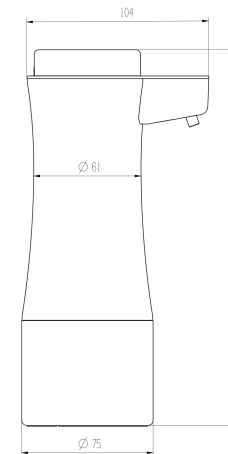

#### AUTOMATIC SOAP DISPENSER

Product Size : 104x75x215mm  
 Color Box : 115x100x235mm  
 Net Weight : 570g(No Battery)  
 Gross Weight : 680g(No Battery)  
 Capacity : 10.8fl.oz ( 320mL )  
 Main Material : SUS304、Glass、ABS

Working Temperature : 1~55°C  
 Working Humidity : ≤95%RH  
 Working Voltage : DC4.2 ~ 6.5V  
 Working Power : ≤1.8W  
 Working Current : ≤800mA

Response Time : 0.25S  
 Flow : ≥1.5 L/min  
 Green Light : 0.8 seconds  
 Blue Ligh : 1.3 seconds

### Trouble-shooting table

| FAULTS                      | REASONS                             | SOLUTIONS                     |
|-----------------------------|-------------------------------------|-------------------------------|
| Unable to boot              | Battery installation error          | Reload the batteries          |
| The light is not on         | Not turned on                       | Power on correctly            |
|                             | Battery installation error          | Reload the batteries          |
| There is no foaming         | The hand sanitizer has been used up | Change the hand sanitizer     |
|                             | Battery is dead                     | Replace the new battery       |
|                             | The inlet is blocked                | Clean the strainer            |
|                             | Self-dispensing is too viscous      | Dilute with water             |
| The light flickered quickly | Black sensor window area is blocked | Turn it off and wipe it clean |

### Warranty instructions

This product after-sales service implementation after-sales service, the service content is as follows:

1. Within 7 days from the day after you sign for it, the product appears in the troubleshooting list and can not be solved. After-sales testing, the product can be returned or replaced free of charge.
2. Within 8-15 days from the day after you sign for it, the product appears in the troubleshooting list and can not be solved. After-sales testing, the product can be returned or replaced free of charge.
3. Within 12 months from the day after you sign for the product, the "Troubleshooting table" and can not solve the failure of the situation, by the store after-sales testing confirmed that free return or exchange services can be enjoyed;

\* The final right of interpretation belongs to the company\*

Harmful substances

| Part name     | Harmful substances |    |    |           |     |      |
|---------------|--------------------|----|----|-----------|-----|------|
|               | Pb                 | Hg | Cd | Cr ( VI ) | PBB | PBDE |
| The shell     | o                  | o  | o  | o         | o   | o    |
| Circuit board | x                  | o  | o  | o         | o   | o    |
| Water pump    | o                  | o  | o  | o         | o   | o    |
| Foaming tube  | o                  | o  | o  | o         | o   | o    |
| Glass bottles | o                  | o  | o  | o         | o   | o    |

This form is prepared in accordance with international standards.

o :Indicates that the content of the hazardous substance in the component is below the limit requirement.

x : Indicates that the content of the hazardous substance in the component exceeds the limit requirement.

Certificate of after-sales service

- Customer : \_\_\_\_\_
- Customer Number : \_\_\_\_\_
- Address : \_\_\_\_\_
- Model : \_\_\_\_\_
- Date of purchase : \_\_\_\_\_
- Store address : \_\_\_\_\_
- Business telephone number : \_\_\_\_\_
- Invoice number : \_\_\_\_\_

CERTIFICATE

Certificate of Quality  
Inspector : \_\_\_\_\_

Qingdao JIUMO  
Intelligent Technology Co.,. Ltd